INSTALLATION DIAGRAM

For Steel Frame Cladded Construction to meet AS3660.1

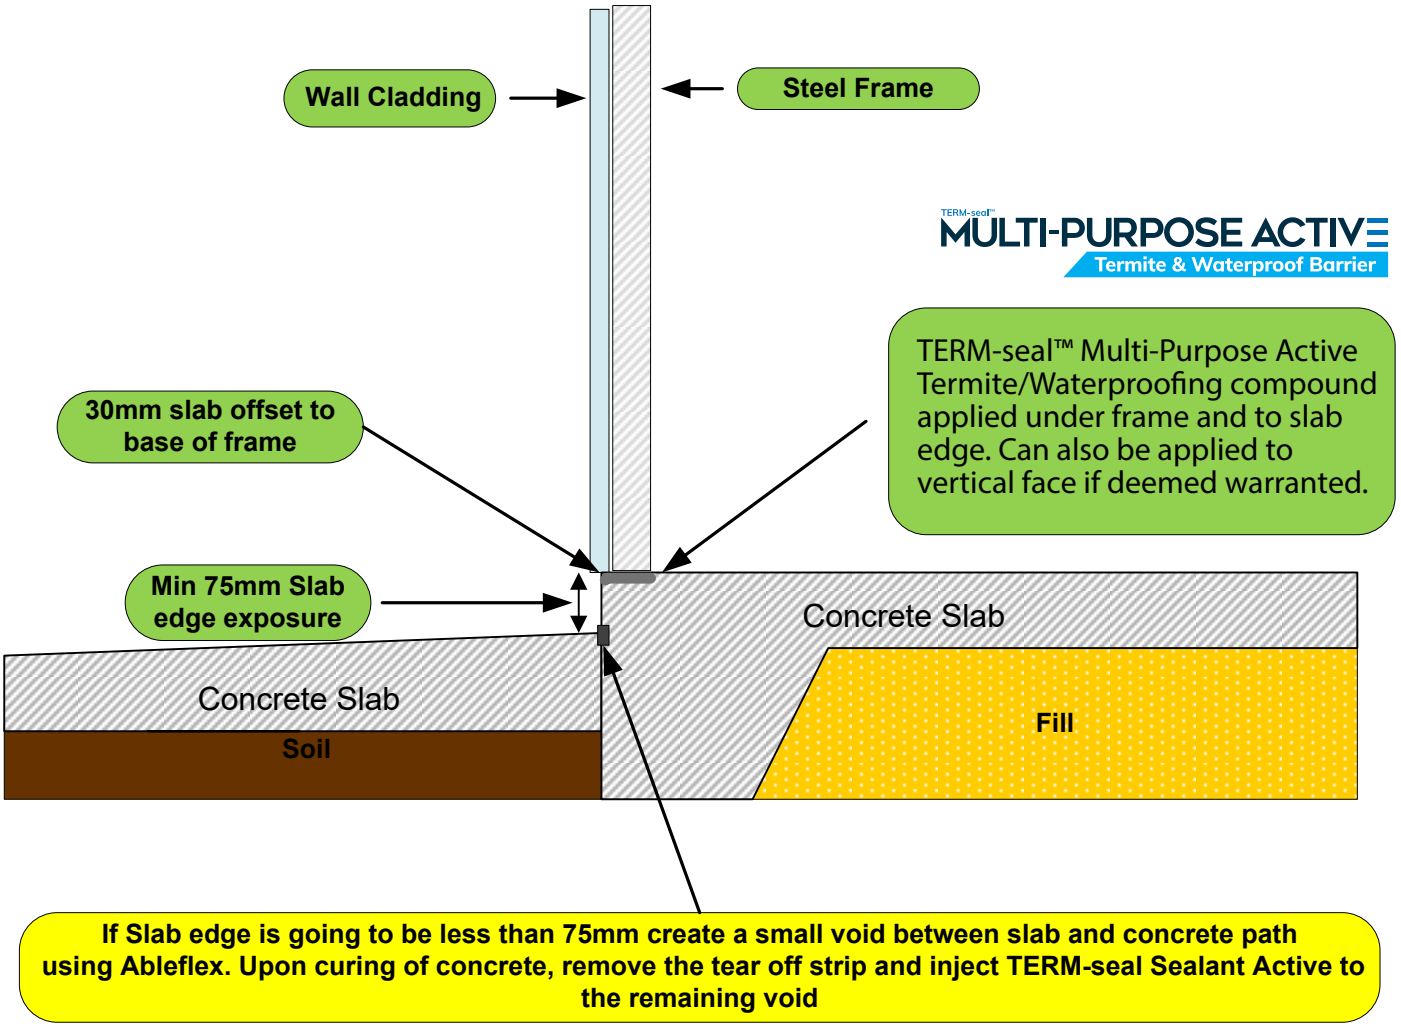

If Slab edge is going to be less than 75mm create a small void between slab and concrete path using Ableflex. Upon curing of concrete, remove the tear off strip and inject TERM-seal Sealant Active to the remaining void